

Tablet PC

Quick Guide

Product Specifications


Dimensions / Weight	• 264 x 176.4 x 13.8mm / ~820g
Processor	• nVIDIA T20 • 1 GHz dual core
OS	• Android
Memory	• RAM: LPDDR2 1GB
Storage	• eMMC Flash 8GB/16GB/32GB/64GB
Display	• 10.1" LCD (1280x800) Wide-view • Capacitive multi-touch screen (supports 10 point gestures)
Camera	• Rear: 5M pixel CMOS (Auto-focus) • Front: 2M pixel CMOS (Fixed-focus)
WWAN	• Optional 3G module card for data transmission (3G version only) • Default supports UMTS: - GSM/GPRS/EDGE Quad-band (850/900/1800/1900) - WCDMA/HSPA Tri-band (2100/1900/850)
WLAN	• 802.11 b/g/n
Bluetooth	• BT 2.1 + EDR
GPS	• Embedded

I/O Ports	• 3.5" Audio jack • Micro USB port • Micro HDMI port • Docking connector / Charger port • SIM card slot • microSD card slot
Audio	• Built-in microphone • Built-in stereo speakers
Battery*	• 26.6 Whr Video playback > 8 hrs
AC Adapter	• 19V / 30W
User Interface	• Rotation locker • Volume Up/Down keys • Power key • Camera key
Sensors	• Ambient light sensor • 3-axis accelerometer • e-Compass • Gyro Sensor

***CAUTION:** *The battery should only be replaced by a manufacturer-approved service facility. Any attempt to remove or replace your battery may damage the product.*

Features



Front View

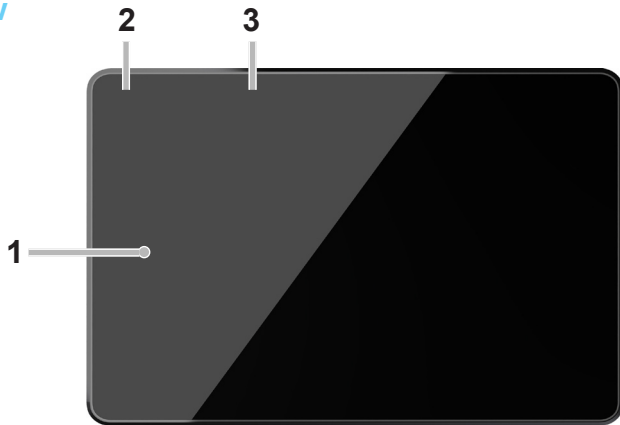

#	Feature
1	10.1" LCD multi-touch screen
2	LED charging indicator
3	Front-facing camera

Rear View


*To open compartment:
press down on the cover
then slide the cover to
the left.*

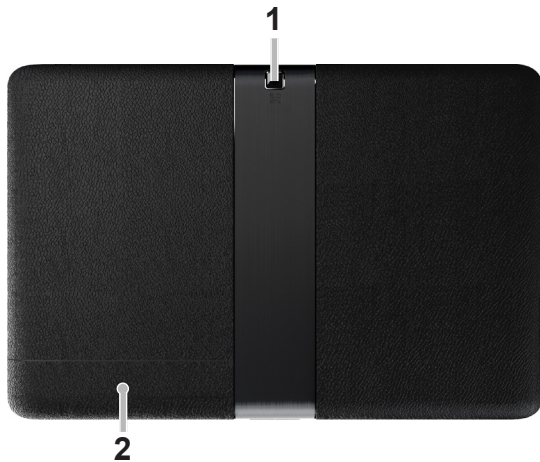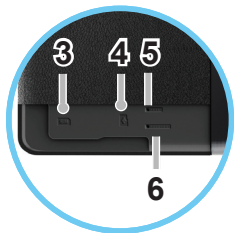

#	Feature	#	Feature
1	Rear-facing camera	4	microSD card slot
2	SIM card / Memory card compartment	5	Reset button
3	SIM card slot	6	Recovery button

Side Views

#	Feature
1	Power key
2	3.5" audio jack
3	Micro USB port
4	Micro HDMI port

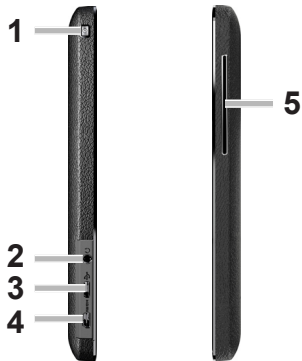


Left Side

Right Side

#	Feature
5	Stereo speakers

Side Views (cont.)

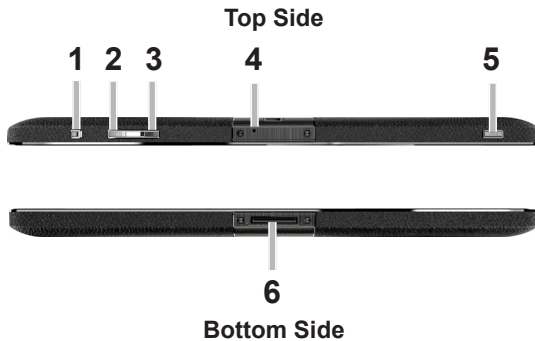

#	Feature	#	Feature
1	Rotation lock switch	4	Microphone
2	Volume increase key	5	Shutter / Camera key
3	Volume decrease key	6	Dock connector / Charger port

LED Indicator

The LED Indicator located on the front side of your tablet will notify you of the status of your tablet's battery. The following table shows each possible indicator states:



LED State	Battery Level (%)
Green (when connected to charger)	Approx 100%
Red (when connected to charger)	0% to under 100%
Blinking Red (only shows when not connected to charger, will not show when tablet is off)	Less than approx 10% (charge as soon as possible)

Getting Started

Charging Your Tablet

WARNING: The battery comes partially charged. You must completely charge the battery (about 5 hours) before using your tablet for the first time. After the first charge you may use your device while charging.

CAUTION: When charging your tablet, make sure to use only the charger that came with your tablet.

1. Plug the charger to the Docking connector / Charger port at the bottom of your tablet.
2. Plug the charger to an electrical outlet to start charging the battery.



Installing the SIM Card (3G version only)

Your Subscriber Identity Module (SIM) card identifies you to the wireless network. Your tablet's mobile broadband connection will not work without a SIM card.

CAUTION: Please be sure to power off your tablet before inserting or removing the SIM card.

To insert the SIM card:

1. Open the SIM and memory card slot cover.
2. Insert the SIM card into the SIM card slot. Gently press the card in until it is fully inserted and then close the cover.



If you need to remove the SIM card:

1. Open the SIM and memory card slot cover.
2. Gently press the SIM card in and then release. The card will pop out of the slot.

Installing a Memory Card

Your tablet includes an extendable microSD card slot that allows you extra storage.

To insert a Memory Card:

1. Open the SIM and memory card slot cover.
2. Insert the memory card into the memory card slot. Press the memory card in until it is fully inserted.
3. Close the SIM and memory card slot cover.



Powering On

1. Press and hold the Power key on the side of your tablet to turn it on.



Powering Off

1. Press and hold the Power key on the side of your tablet for several seconds.
2. Use the touchscreen to confirm that you want to Power off your tablet.

Understanding Your Tablet

HDMI®

Your tablet's Micro HDMI port allows you to connect it to other HDMI-enabled devices in order to share photos, videos, and other media content.



Bluetooth® Wireless

Bluetooth wireless technology allows you to

connect your tablet to other Bluetooth-enabled devices such as Bluetooth stereo headsets, or Bluetooth keyboards for quick and easy text entry.

USB Connection

A Micro USB connection allows you to transfer HD video, music, pictures, photos and other media content between your tablet and a computer. Use the USB cable that came with your tablet to make the connection and do the following:



- Microsoft™ Windows™ XP, Windows Vista, and Windows 7 - On your computer, click Start, open your list of programs, and select Windows Explorer. Then drag and drop files from your computer to your tablet.
- Apple™ Macintosh™ - Use Android File Transfer. (You can download it from <http://www.android.com/filetransfer>.)

Troubleshooting

Forced Reboot

In the event that your tablet becomes unresponsive (either the display freezes, or the machine will not power on), you may try a forced reboot.

To force your tablet to reboot:

1. *Open the SIM and memory card slot cover on the rear of your tablet.*
2. *Locate the Reset button in the SIM / Memory card compartment.*
3. *Using a pointed instrument press the Reset button (for about one second).*



System Recovery

In certain circumstances you may need to revert your tablet back to its original factory settings, doing so will also erase all the data saved on your tablet. To revert your tablet to factory settings and erase all the data on your device (data stored on your SD card, if installed at the time of the recovery, will not be affected), use the Recovery button below the Reset button on the rear of your tablet.

To run System Recovery while the tablet is Powered off:

1. *Open the SIM and memory card slot cover on the rear of your tablet.*
2. *Connect the power and micro USB cable to the device and PC.*
3. *Press and hold the Recovery button, then press the Power button for 3 seconds.*
4. *Release the Power and Recovery buttons.*
5. *Run the image download application for a firmware update.*



To run System Recovery while the tablet is Powered on (could be in suspend mode or LCD on):

1. *Open the SIM and memory card slot cover on the rear of your tablet.*
2. *Connect the power and micro USB cable to the device and PC.*
3. *Press and hold the Recovery button, then press the Reset button for 1 second.*
4. *Release the Recovery and Reset buttons.*
5. *Run the image download application for firmware update.*